

STATE OF IDAHO
DEPARTMENT OF WATER RESOURCES
BENEFICIAL USE FIELD REPORT

A. GENERAL INFORMATION

Permit No: 95-15433

Exam Date: 7/27/2016

1. Current Owner:
ROBERT E GROSSGLAUSER JR 3718 CAROLWOOD CT POST FALLS ID 83854 (208) 640-3127

2. Accompanied by: Applicant

3. **SOURCE:**
UNNAMED STREAM

TRIBUTARY:
LAKE CREEK

B. OVERLAP REVIEW

1. Other water rights with the same place of use: None
2. Other water rights with the same point-of-diversion: None

C. DIVERSION AND DELIVERY SYSTEM1. **LOCATION OF POINT(S) OF DIVERSION:**

UNNAMED STREAM NE¼NE¼ Sec. 16, Twp 48N, Rge 05W, B.M. KOOTENAI County

Method of Determination: GPS and maps. POD location at 116° 42.498, 47° 16.840

2.

PLACE OF USE: FIRE PROTECTION STORAGE

Twp	Rge	Sec	NE				NW				SW				SE				Totals
			NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	
48N	05W	16	X																

PLACE OF USE: RECREATION STORAGE

Twp	Rge	Sec	NE				NW				SW				SE				Totals
			NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	
48N	05W	16	X																

PLACE OF USE: WILDLIFE STORAGE

Twp	Rge	Sec	NE				NW				SW				SE				Totals
			NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	
48N	05W	16	X																

PLACE OF USE: STOCKWATER STORAGE

Twp	Rge	Sec	NE				NW				SW				SE				Totals
			NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	NE	NW	SW	SE	
48N	05W	16	X																

Method of Determination: GPS and arc map.

3.

Delivery System Diagram Attached (required). Indicate all major components and distances between components. Indicate weir size/pipe as applicable.

 Map Attached Showing Location(s) of point(s) of diversion and place(s) of use (required). Scale must be 1:24,000 or greater.

X

 Aerial Photo Attached (required for irrigation of 10+ acres).

X

 Photo of Diversion and System Attached

X

4.

Well or Diversion ID No.*	Motor Make	Hp	Motor Serial No.	Pump Make	Pump Serial No. or Discharge Size

*Code to correspond with No. on map and aerial photo

D. FLOW MEASUREMENTS

1.

Measurement Equipment	Type	Make	Model No.	Serial No.	Size	Calib. Date

2. Measurements:

E. FLOW CALCULATIONS

Measured Method:

 Additional Computation Sheets Attached

F. VOLUME CALCULATIONS

1. Volume Calculations for Irrigation:

$$V_{IR} = (\text{Acres Irrigated}) \times (\text{Irrigation Requirement}) =$$

$$V_{DR} = [\text{Diversion Rate (cfs)}] \times (\text{Days in Irrigation season}) \times 1.9835 =$$

$$V = \text{Smaller of } V_{IR} \text{ and } V_{DR} =$$

2. Volume Calculations for Other Uses: SEE ATTACHED FOR POND ANALYSIS SHEET

G. NARRATIVE/REMARKS/COMMENTS

Field exam with permit owner Mr. Grossglauser showed an instream pond that was 0.6 acres in surface area and had an average depth of 9 feet. At exam time there were no stock present as they were on another field. Applicant said stock would drink from pond and that there was no pumping from the pond to stockwater tanks. Stockwater from storage will be removed at licensing. Applicant said it was a great place to see moose, deer, and elk drinking from pond. Applicant said he would occasionally take out a kayak or canoe for kids to play with. Dam height was around 10 feet with side channel to direct flow when pond was full downstream. License total will be reduced because of better evaporation numbers using new pond analysis tool.

Have conditions of permit approval been met? X Yes No

H. RECOMMENDATIONS

1. Recommended Amounts

<u>BENEFICIAL USE</u>	<u>PERIOD OF USE</u>	<u>DIVERSION RATE</u>	<u>ANNUAL VOLUME</u>
STOCKWATER STORAGE	01/01 to 12/31		7.0 AF
FIRE PROTECTION STORAGE	01/01 to 12/31		6.3 AF
RECREATION STORAGE	01/01 to 12/31		6.3 AF
WILDLIFE STORAGE	01/01 to 12/31		6.3 AF
<u>Totals:</u>			7.00 AF

2. Recommended Amendments

 Change P.D. as reflected above Add P.D. as reflected above X None

 Change P.U. as reflected above Add P.U. as reflected above X None

I. AUTHENTICATION


Field Examiner's Name Adam Friedman Date 2-21-2017

Reviewer Mary Case Date 2/21/2017

State of Idaho
Department of Water Resources
Water Right License
95-15433

FIRE PROTECTION STORAGE, STOCKWATER STORAGE, RECREATION STORAGE,
and WILDLIFE STORAGE

05W

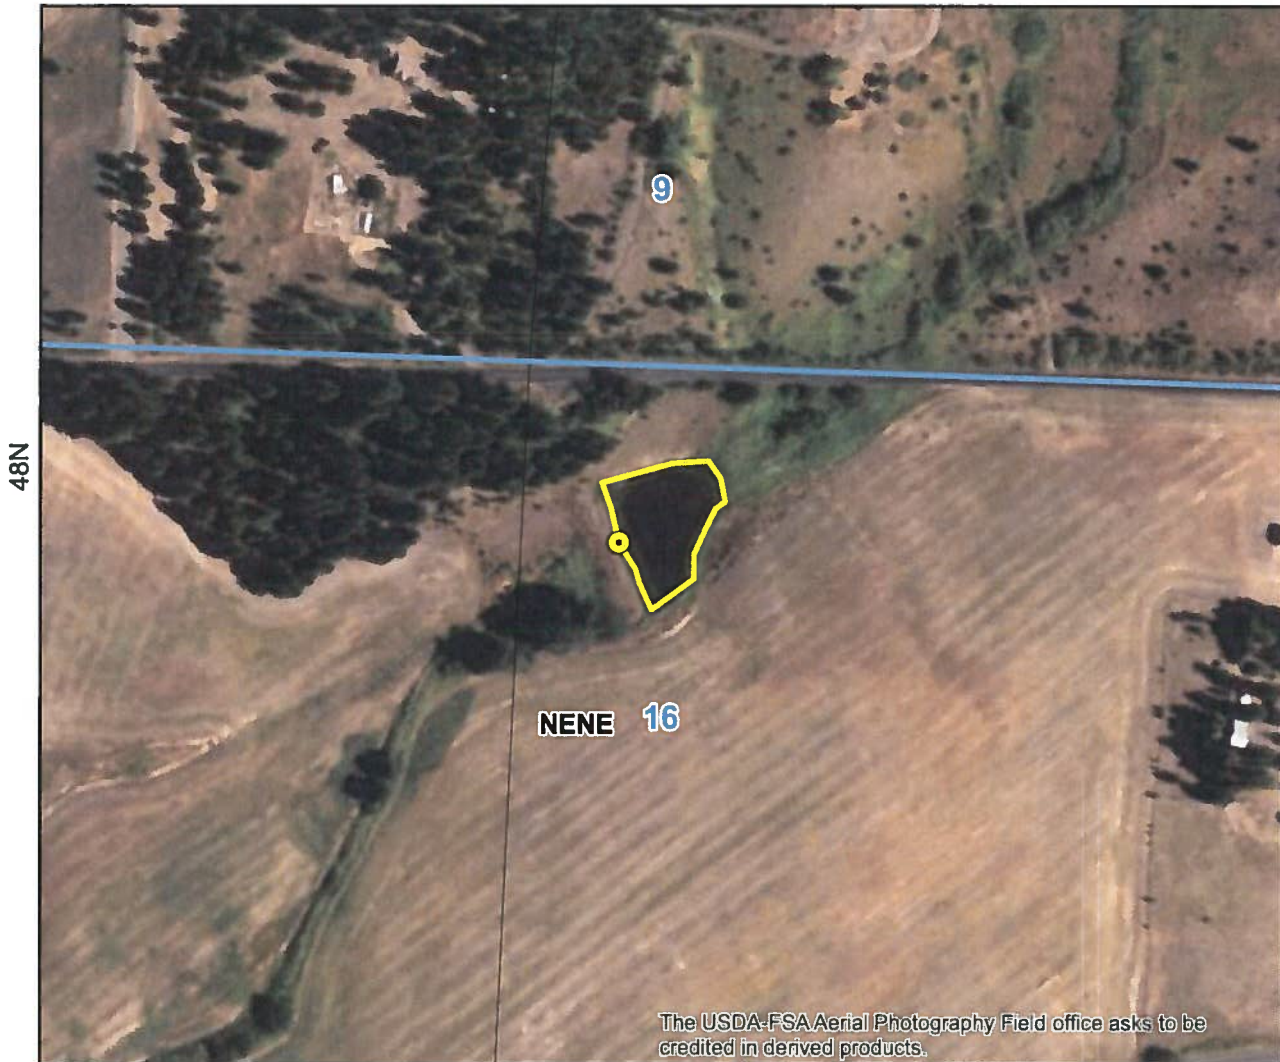

-  Point of Diversion
-  Place Of Use Boundary
-  Townships
-  PLS Sections

0 0.035 0.07 0.14 Miles



Total Storage Calculations

FILE NUMBER	95-15433
REVIEWER	Adam Frederick
DATE	11/21/2016

This spreadsheet has been designed by Idaho Department of Water Resources to estimate the total seepage, evaporation and fill capacity required for a pond.

User Input
Calculated value
Formula Explanations

Surface Area (AC.)	0.6	"Surface Area" is automatically carried over from the "Seepage Loss" sheet.
Average Pond Depth (FT.)	9	"Average Pond Depth" depicts the actual depth of the pond either measured or estimated. Note: If you know the maximum depth and not the average depth, the Field Examiner's Handbook suggests multiplying the maximum depth by 0.4 to get the average depth, or you can use any method that seems reasonable to attain average depth.
Pond Capacity (AF)	5.4	Pond Capacity is calculated by multiplying the Pond Surface Area by the Average Pond Depth. If you know the capacity, divide the capacity by surface area and enter the average pond depth in the space above. Note: If pond capacity is determined using a method shown on the "Pond Capacity" sheet, the user may need to modify the value of "Pond Capacity" (cell B9) manually. Note that if the value is modified manually, the formula will be altered for future use.
Multiple Fill Volume Above Initial Fill to Fulfill From Storage Needs- "Multiple Fills" (AF)	0	The "Multiple Fill Volume Above Initial Fill" is the acre-feet of water required to meet a <i>from storage</i> component if the <i>from storage</i> component exceeds a one time fill. This section should not include the amount of water needed to fill the pond initially or the amount of water needed to maintain the pond level due to evaporation or seepage. For example: if a pond has a capacity of 5 acre feet and 2.5 acre feet of seepage and evaporation, but the pond is used for irrigation that requires 10 acre feet of from storage for the irrigation use, then you would insert 5 acre feet into this location (10 acre feet needed - 5 acre feet from the initial fill = 5 acre feet of additional storage needed). Note: You must have a "From Storage" component exceeding the initial fill on the permit to include a volume in this space.
Estimated Seepage Loss (AF)	0.0	The "Estimated Seepage Loss" is automatically carried over from the "Seepage Loss" sheet.
Estimated Evaporation Loss (AF)	0.9	The "Estimated Evaporation Loss" is automatically carried over from the "Evaporation Loss" sheet.
Total Volume Required (AF)	6.3	The "Total Volume Required" is calculated by adding the Pond Capacity, Multiple Fills, Seepage Loss, and Evaporation Loss amounts to determine the total amount of storage required.


Total Storage Calculations (50 head of mixed stock)

FILE NUMBER	95-15433
REVIEWER	Adam Frederick
DATE	11/21/2016

This spreadsheet has been designed by Idaho Department of Water Resources to estimate the total seepage, evaporation and fill capacity required for a pond.

User Input
Calculated value
Formula Explanations

Surface Area (AC.)	0.6	"Surface Area" is automatically carried over from the "Seepage Loss" sheet.
Average Pond Depth (FT.)	9	"Average Pond Depth" depicts the actual depth of the pond either measured or estimated. Note: If you know the maximum depth and not the average depth, the Field Examiner's Handbook suggests multiplying the maximum depth by 0.4 to get the average depth, or you can use any method that seems reasonable to attain average depth.
Pond Capacity (AF)	5.4	Pond Capacity is calculated by multiplying the Pond Surface Area by the Average Pond Depth. If you know the capacity, divide the capacity by surface area and enter the average pond depth in the space above. Note: If pond capacity is determined using a method shown on the "Pond Capacity" sheet, the user may need to modify the value of "Pond Capacity" (cell B9) manually. Note that if the value is modified manually, the formula will be altered for future use.
Multiple Fill Volume Above Initial Fill to Fulfill From Storage Needs- "Multiple Fills" (AF)	0.7	The "Multiple Fill Volume Above Initial Fill" is the acre-feet of water required to meet a <i>from storage</i> component if the <i>from storage</i> component exceeds a one time fill. This section should not include the amount of water needed to fill the pond initially or the amount of water needed to maintain the pond level due to evaporation or seepage. For example: if a pond has a capacity of 5 acre feet and 2.5 acre feet of seepage and evaporation, but the pond is used for irrigation that requires 10 acre feet of from storage for the irrigation use, then you would insert 5 acre feet into this location (10 acre feet needed - 5 acre feet from the initial fill = 5 acre feet of additional storage needed). Note: You must have a "From Storage" component exceeding the initial fill on the permit to include a volume in this space.
Estimated Seepage Loss (AF)	0.0	The "Estimated Seepage Loss" is automatically carried over from the "Seepage Loss" sheet.
Estimated Evaporation Loss (AF)	0.9	The "Estimated Evaporation Loss" is automatically carried over from the "Evaporation Loss" sheet.
Total Volume Required (AF)	7.0	The "Total Volume Required" is calculated by adding the Pond Capacity, Multiple Fills, Seepage Loss, and Evaporation Loss amounts to determine the total amount of storage required.

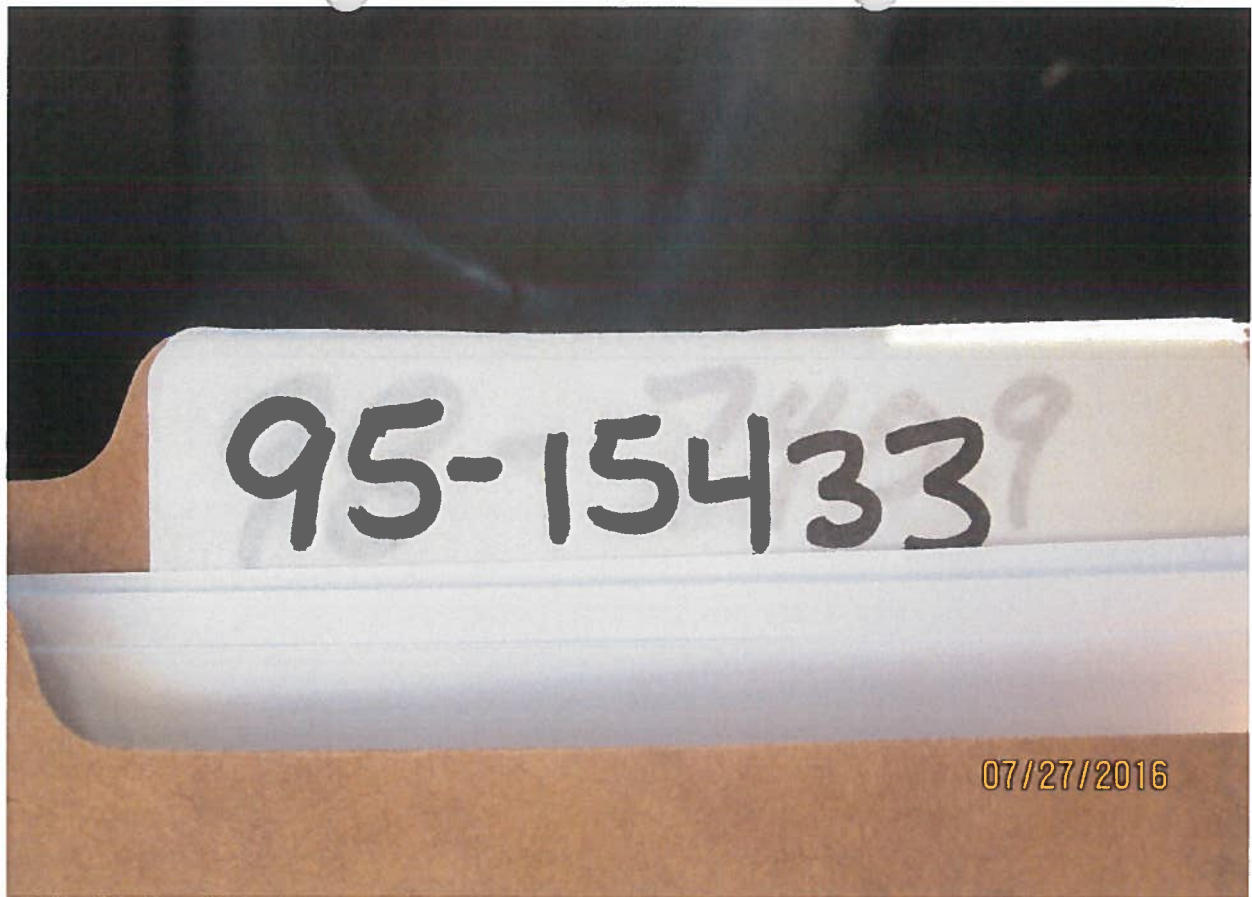

View of pond looking upstream from dam. Dam is located on left side of picture.



Dam is grassy area on left side. Overflow channel is below where cat tails are located.



View downstream from dam location.